

ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0166 / W0167 / W0188 / W0305

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements. 2. READ AND SAVE THESE INSTRUCTIONS.

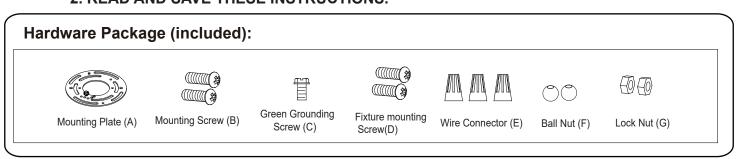

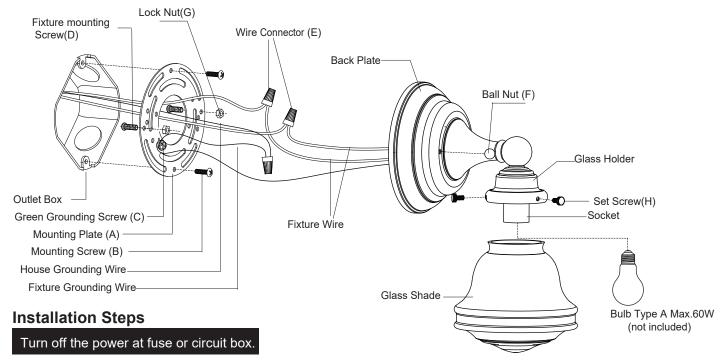

- 1. Unscrew two ball nuts, and then remove the mounting plate from the back plate.
- 2. Attach the mounting plate to the outlet box by using two mounting screws.
- 3. Pull out the source wires from the outlet box. Make wire connections using wire connectors as follow:
 - ---Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
 - ---Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
 - ---Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting plate with the green grounding screw, and then connect it to the house grounding wire with the wire connector. Carefully put the wires back into the outlet box.
- 4. Attach the back plate to the mounting plate by inserting two fixture mounting screws, and then secure it with two ball nuts.
- Install 1x60W Max. medium base bulb(not included). Check relamping label at socket area or packaging for maximum allowed wattage.
- 6. Loose three set screws and then attach the glass shade to the glass holder, finally secure it with three set screws. (Don't over tighten.)



The following parts are available for re-order if damaged or missing.

